


Reference no:

Designed by

Rowhard Pfeifer


0 10 20 30 40 50 60 70 80 90 100 110 120 \mathbf{E} \mathbf{C} B D H I F G **A6** x4Ø3x15 Rx1 **A**1 A7 x20 450mm Ø8x35 **A2 A8** x16 Ø7x24 x1**A3 A9** x16 Ø15x12 **x**4 A10 **A4** x4**8**x A 12 A11 **A5** x4x4 Ø6,3x11 x420mm


Ruler - To help correctly identify the fitings

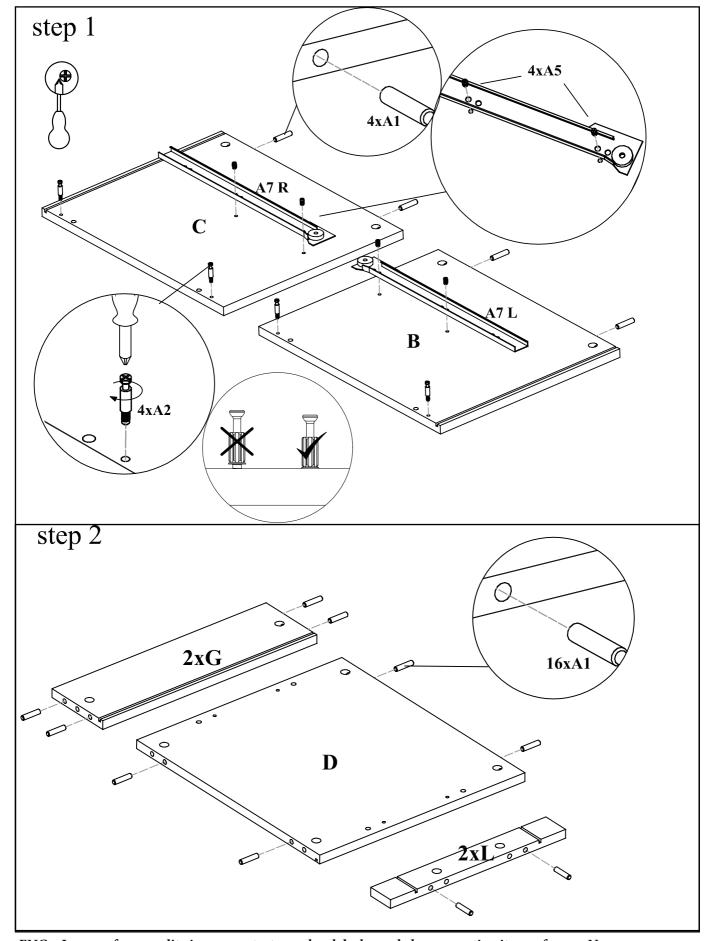



ENG – In case of any quality issues, contact your local dealer and always mention item reference No.


- FR En cas de problèmes de qualité, contactez votre revendeur local et mentionnez toujours la référence de l'article.
- IT In caso di eventuali problemi di qualità, contattare il rivenditore locale e citare sempre punto di riferimento No.
- ES En caso de problemas de calidad, póngase en contacto con su distribuidor local y mencione siempre la referencia del artículo.
- DE Wenn Sie Qualitätsprobleme haben wenden Sie sich bitte an ihren örtlichen Händler und erwähnen Sie immer die Artikelnummer.

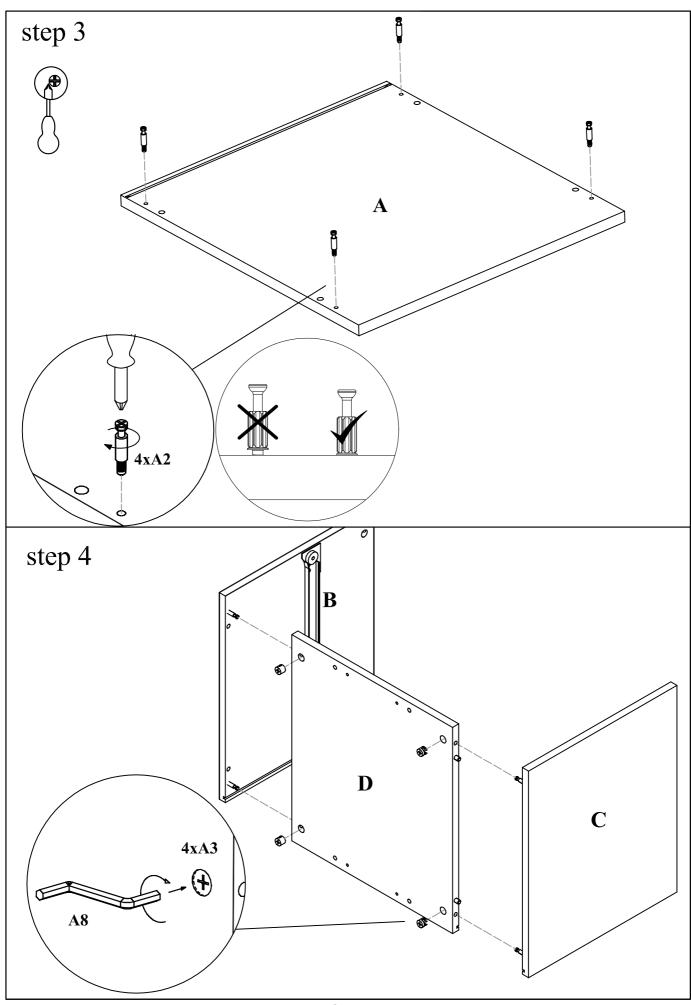


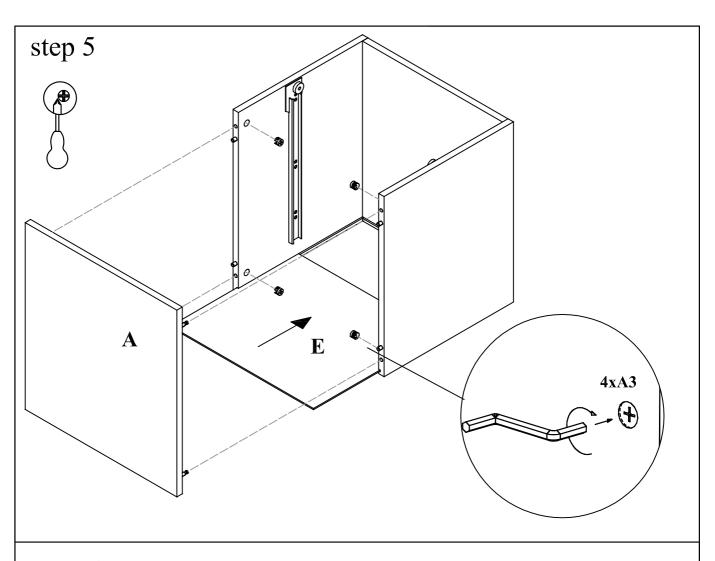

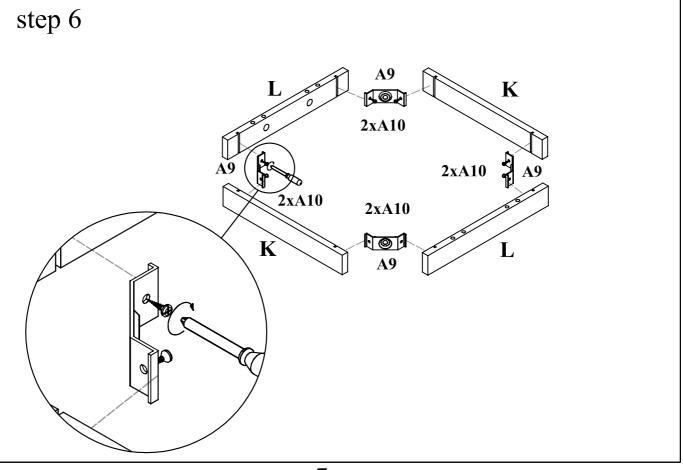

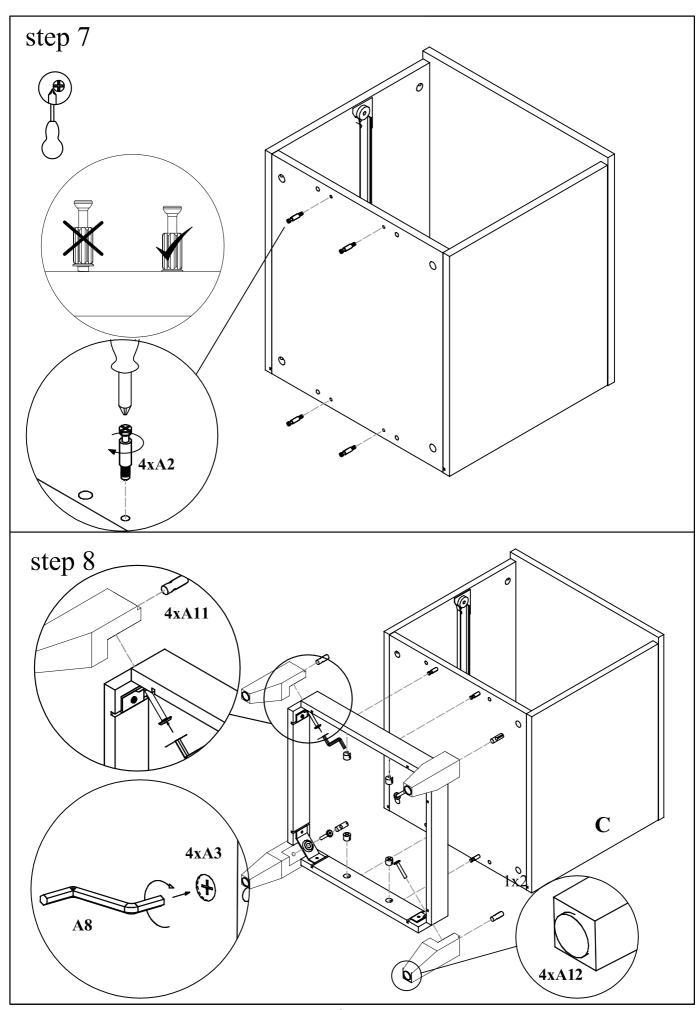

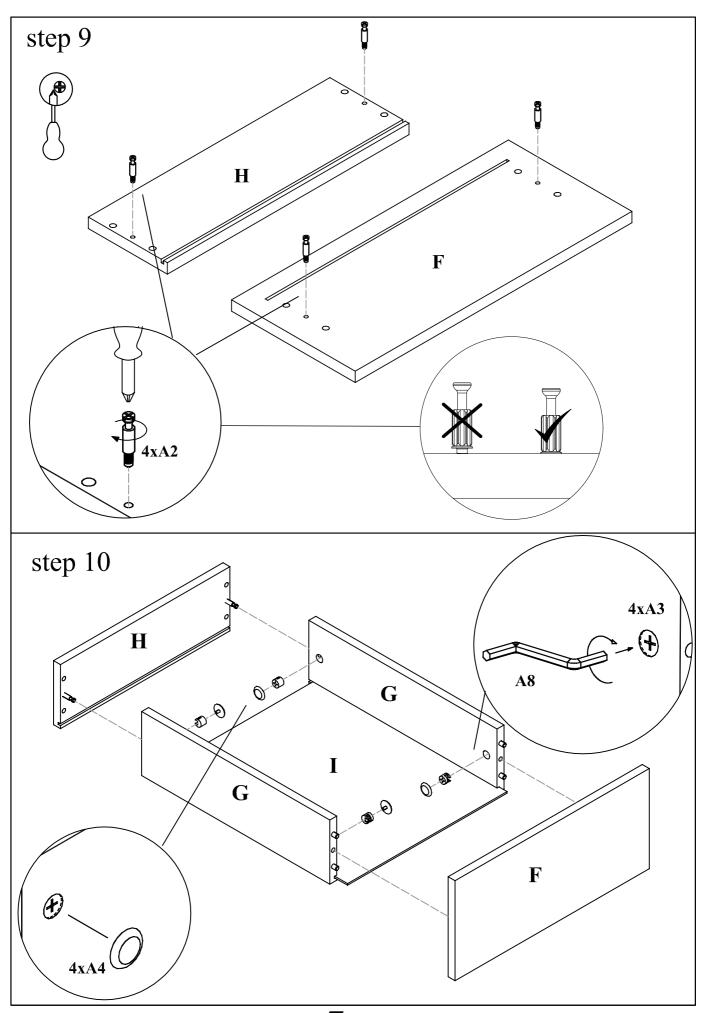

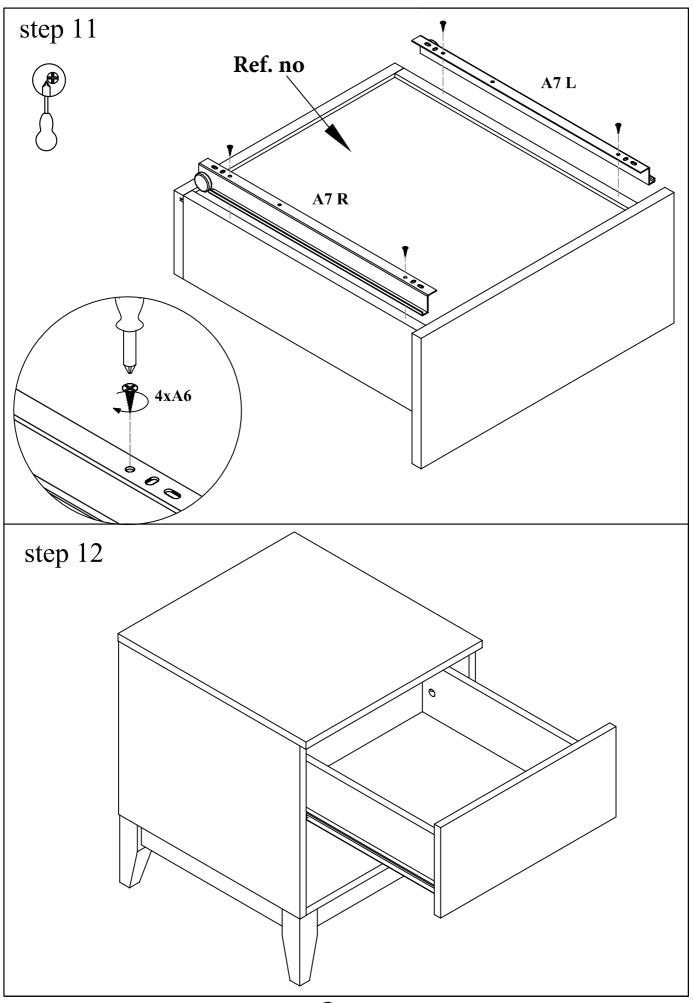

Important - Please read these instructions fully before starting assembly

Check you have all the components and tools.

Remove all fittings from the plastic bags and separate them into their groups.

Keep children and animals away from the work area, small parts could choke if swallowed.

Make sure you have enough space to layout the parts before starting.

Do not stand or put weight on the product, this Assemble on a soft level surface to avoid could cause damage.

Assemble the item as close to its final position (in the same room) as possible. Do not place furniture directly in front of radiators, fires or any other source of heat.



Parts of the assembly will be easier with 2 people.

damaging the unit or your floor.



We do not recommend the use of power drill/drivers for inserting screws, as this could

damage the unit. Only use hand screwdrivers.

Dispose of all packaging carefully and responsibly.

General care and maintenance

Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

From time to time check that there are no loose screws and connectors on this unit.

This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Cleaning and care of high gloss surfaces

Regular dusting with a dry cloth will keep your units clean.

Do not clean with products contaiing the following: Acetone, (e.g nail varnish remover). Ammonia (e.g.bleach). or Sodium hydroxide (e.g. Caustic soda, drain and oven cleaners).

Clean marks with a damp cloth.

Do not use abrasive cleaners.

In the event of accidental contact with aggresive cleaners, rinse thoroughly with water.

Do not allow spillages to stay on the surface for long.

To remove stubborn stains, wipe over with a damp cloth and washing up liquid.

Use place mats to protect the surface from moisture and heat.

Maximum weight limit

