


Front

mounting instructions


use screws for a secure fit:

Note: Measure first so the screws won't poke through the other side!



1 position

- Use a pencil to mark the spot through the openings.
- Install screws, leaving about 1/4" (0.6 cm) exposed.

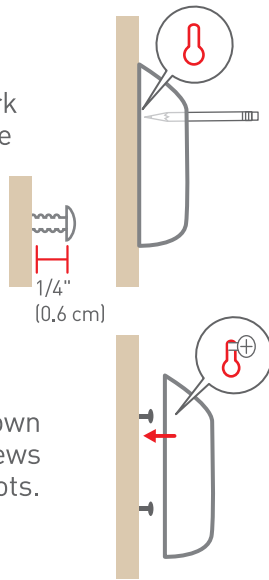


2 mount

- Press the holder down lightly until the screws move up into the slots.

use tape only on smooth surfaces:

Note: Tape may not hold on rough surfaces like wood or plaster.

1 peel and stick

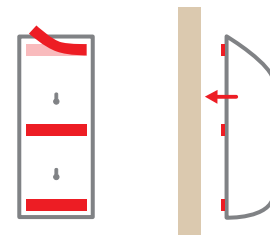

- Clean and dry the surface.
- Peel the backing off the tape.
- Press the holder firmly to the surface.

Back

Questions?

Find answers easily online:
www.simplehuman.com/service

120-0069-03