



7701025 Asolo Garden Lounge set

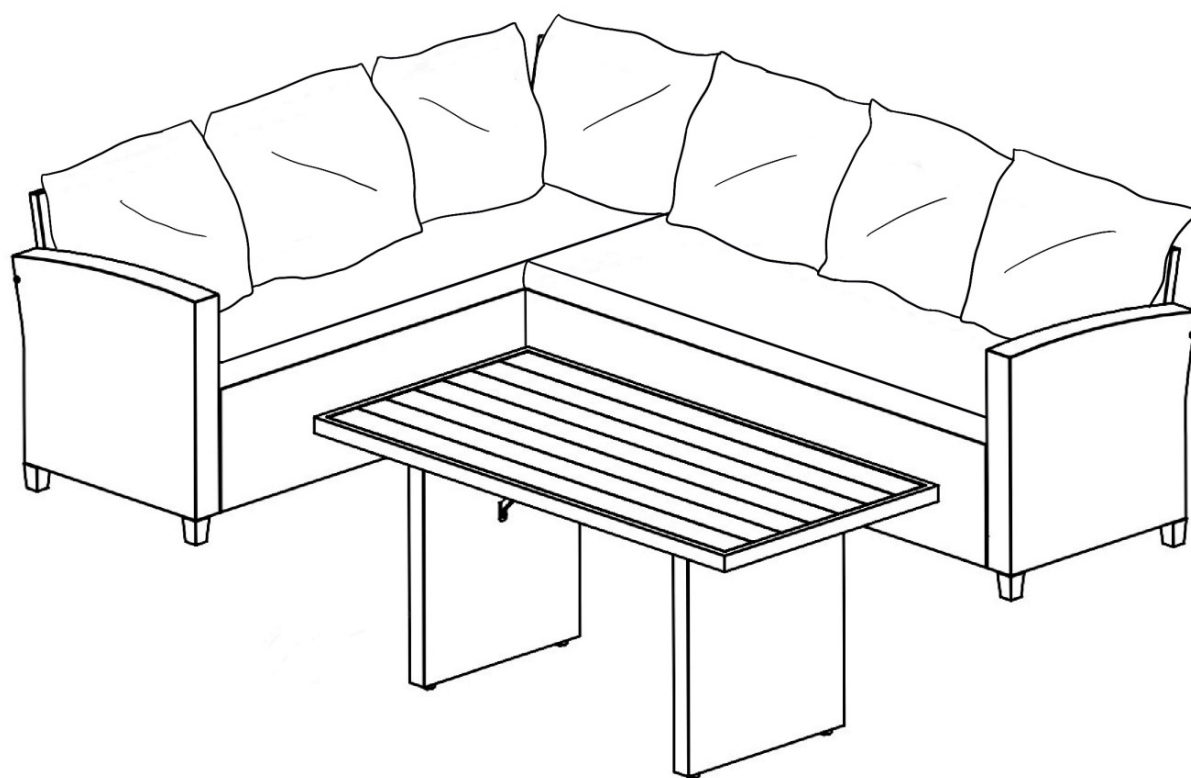

ASSEMBLY INSTRUCTION

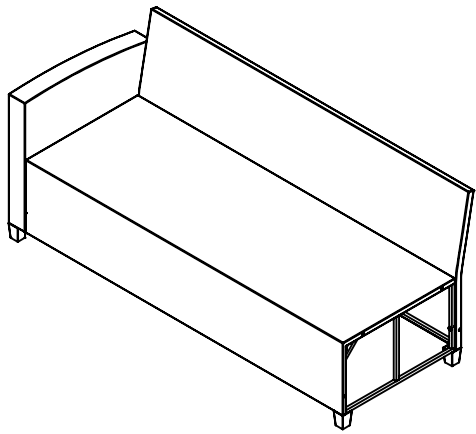


① x03
M6x30



② x06
M6x40




③ x04
M6x60

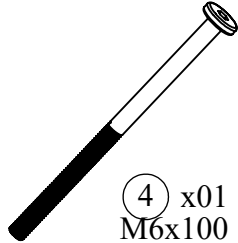


④ x01
M6x100



⑤ x10

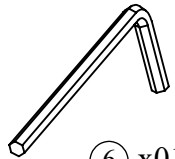


⑥ x01

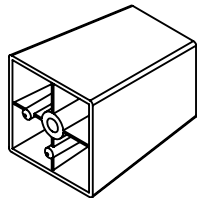


⑦ x4


Step 1

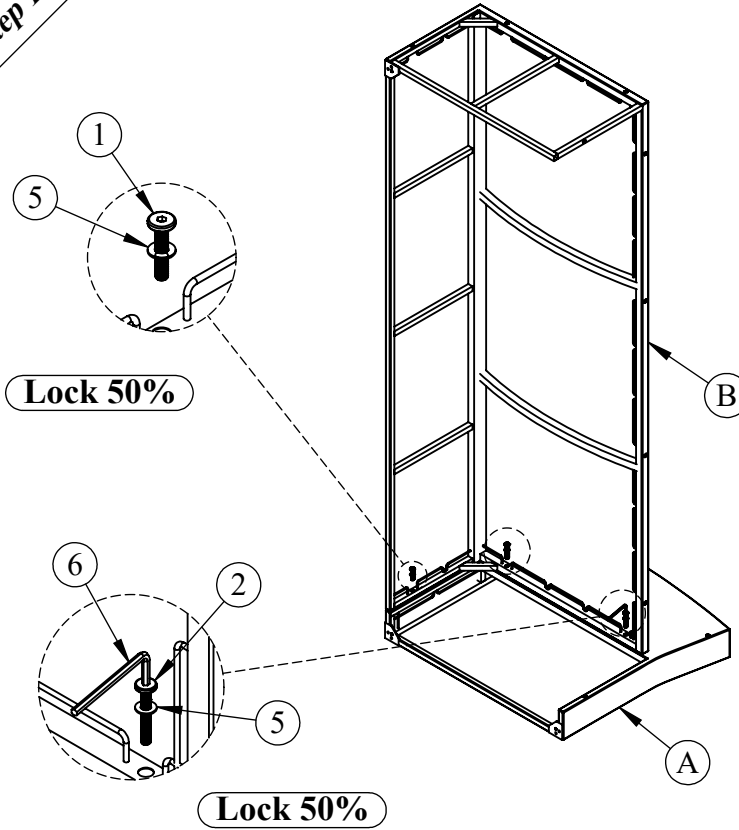


Step 2

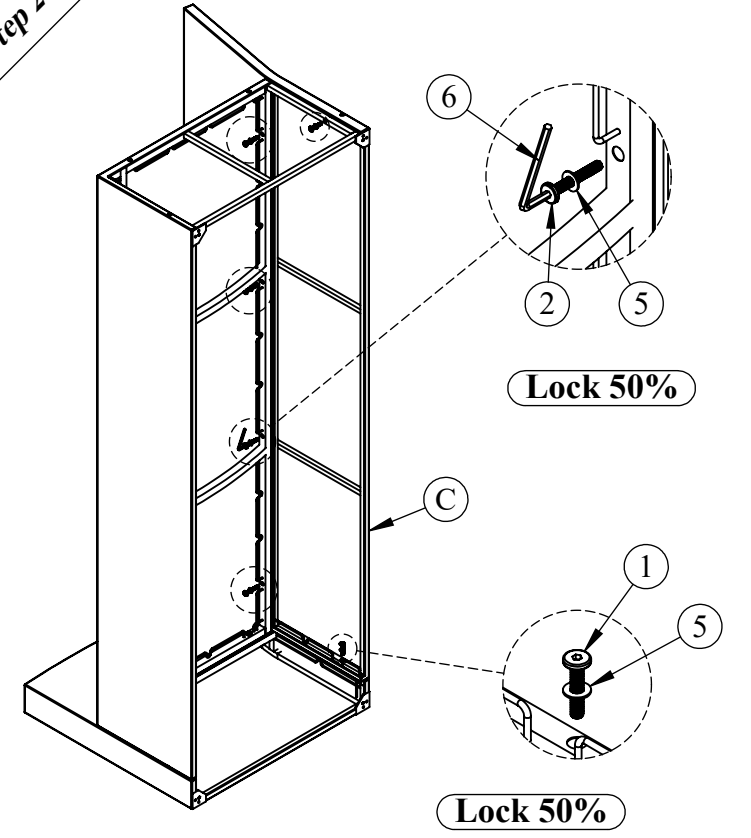


1/2

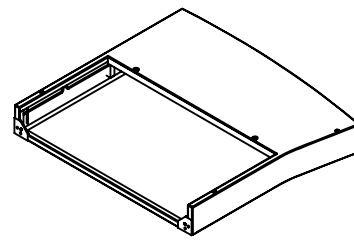

① A x1

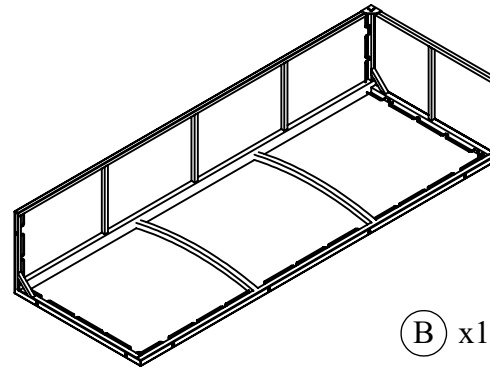


① B x1

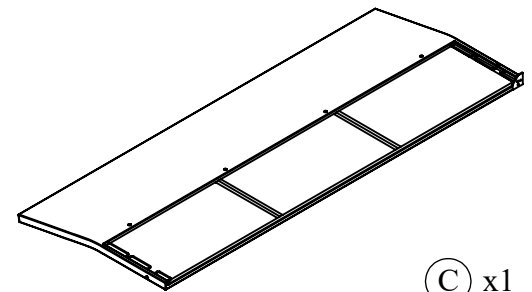


① C x1


Step 3

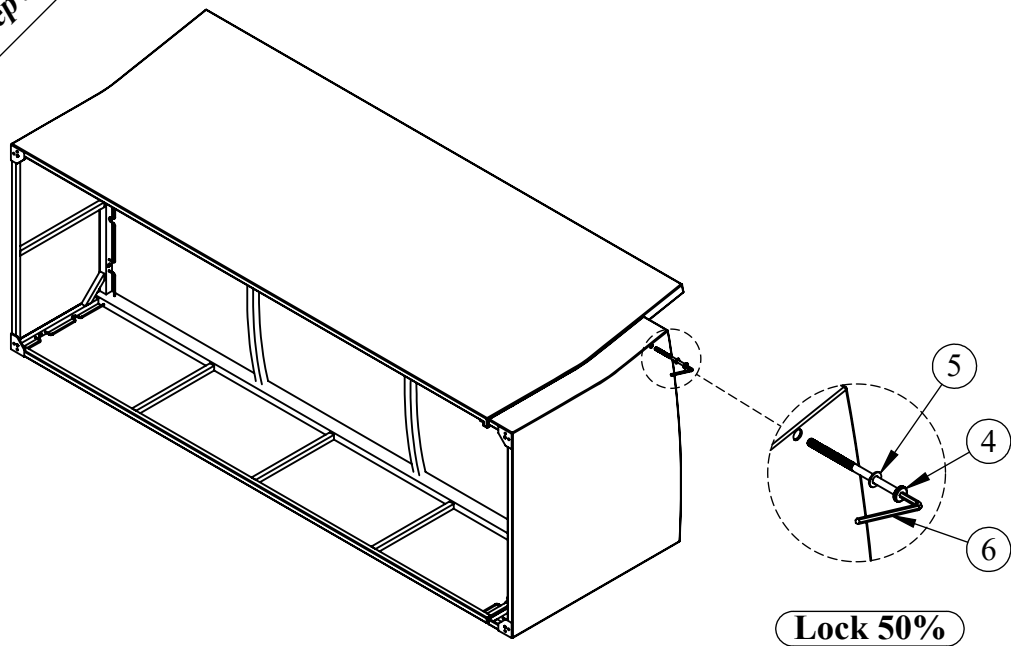


Step 4

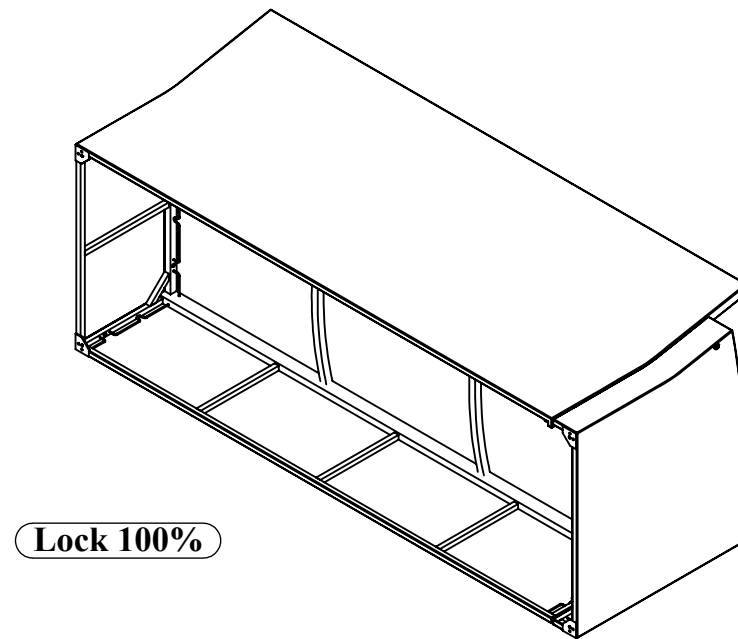


Step 5

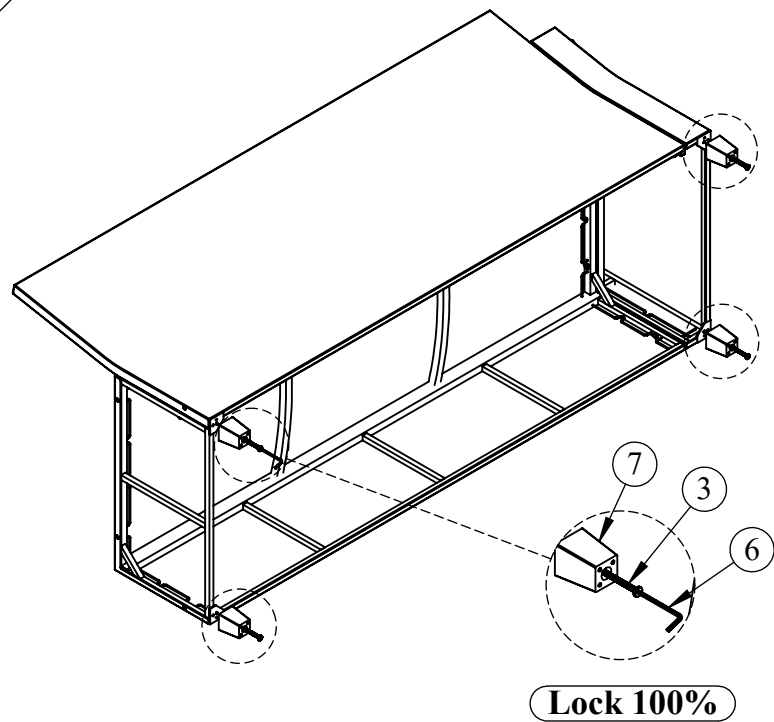

Finish

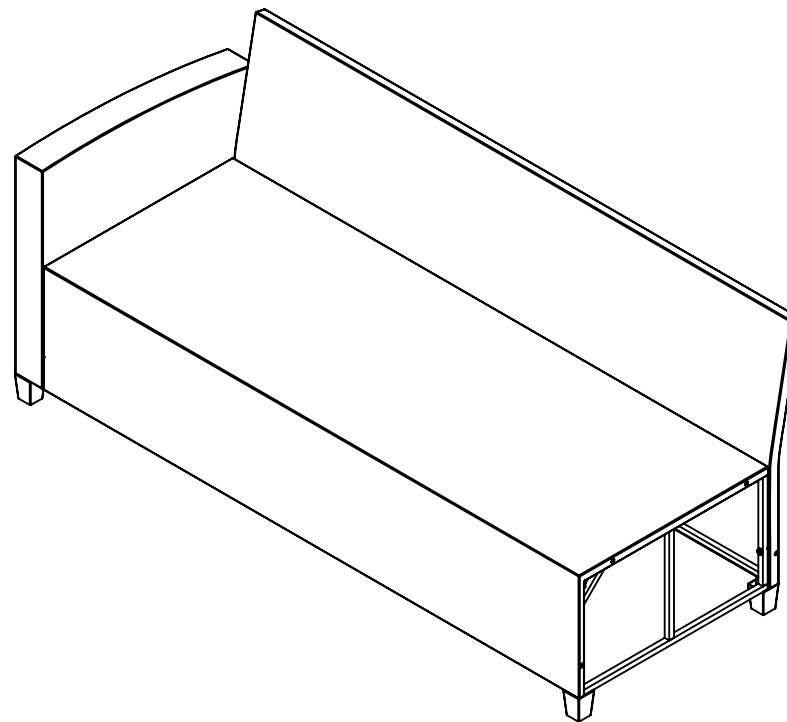

ASSEMBLY INSTRUCTION

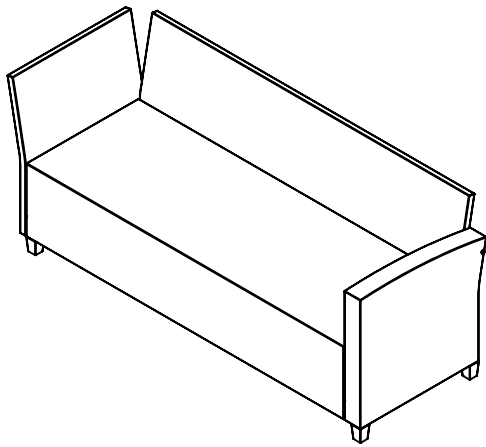


① x05
M6x30



② x08
M6x40




③ x04
M6x60

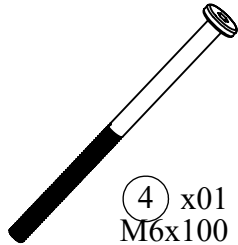


④ x01
M6x100



⑤ x14

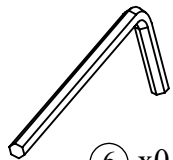


⑥ x01

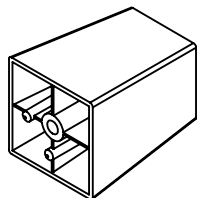


⑦ x4


Step 1

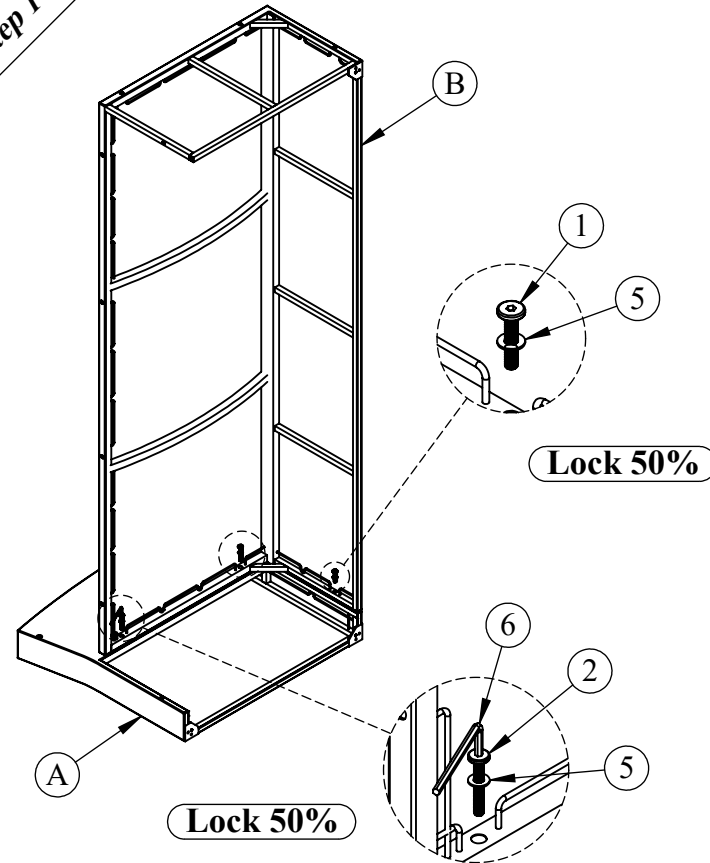


Step 2

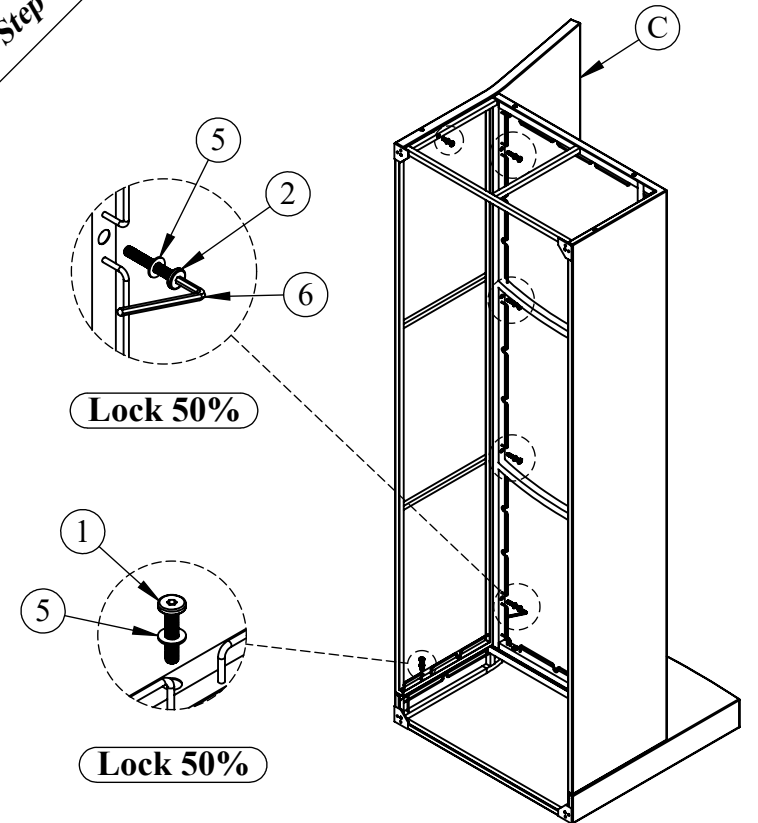


1/2

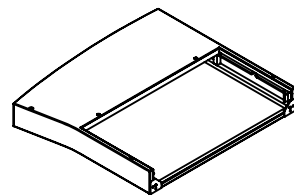


① x1

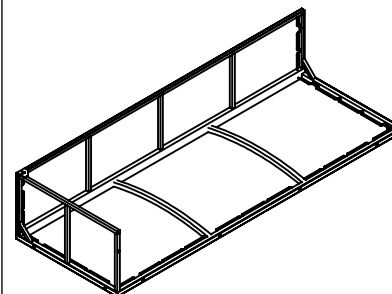

② x1

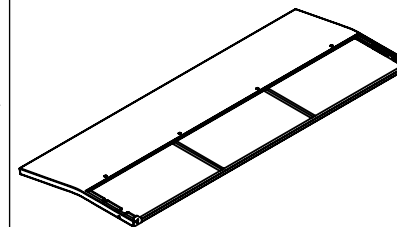


③ x1

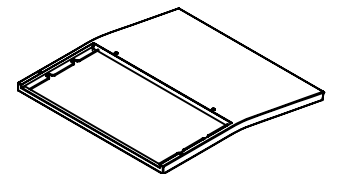


④ x1


Step 3

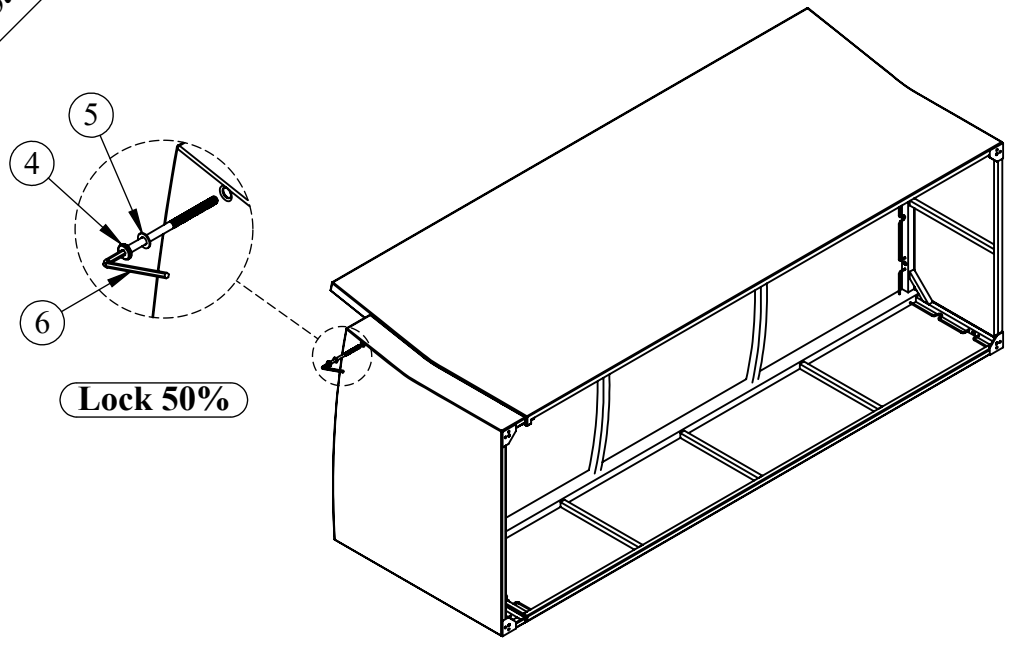


Step 4

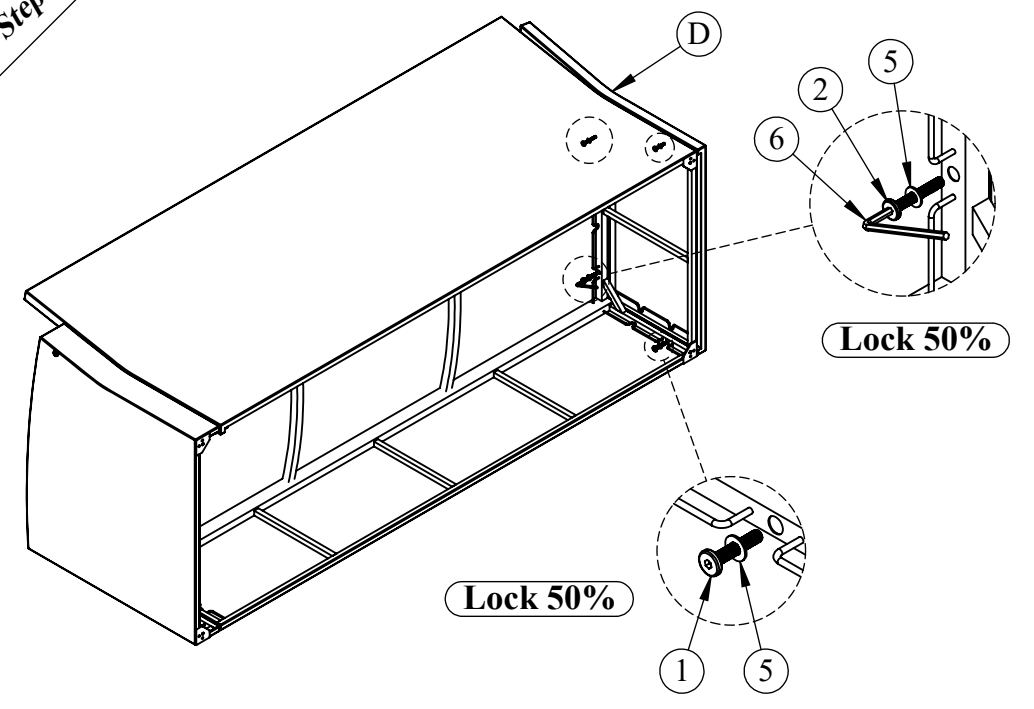


Step 5

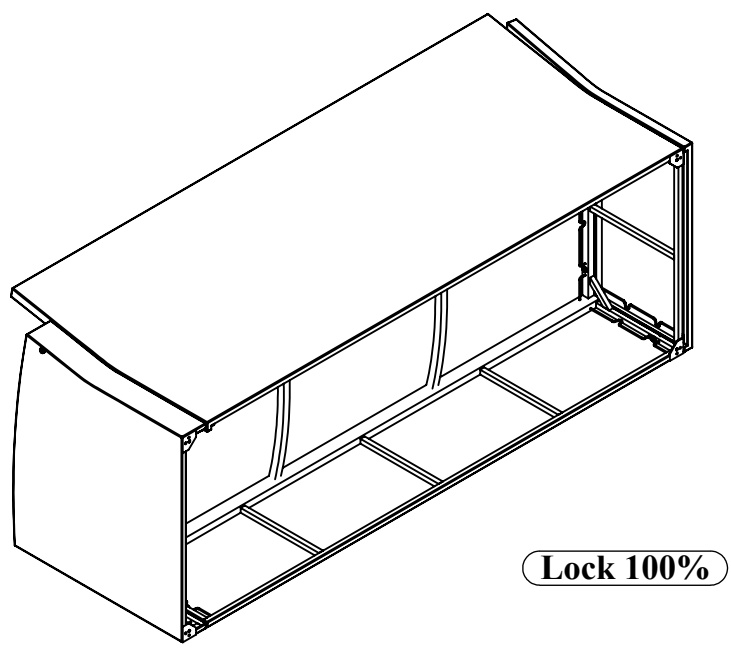

Finish

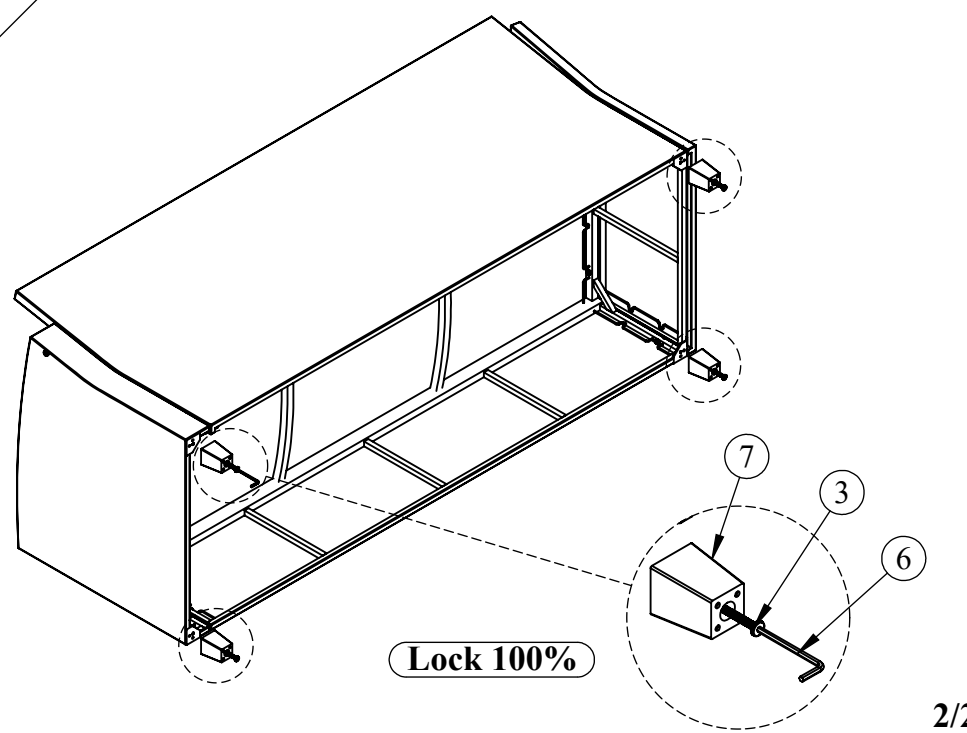


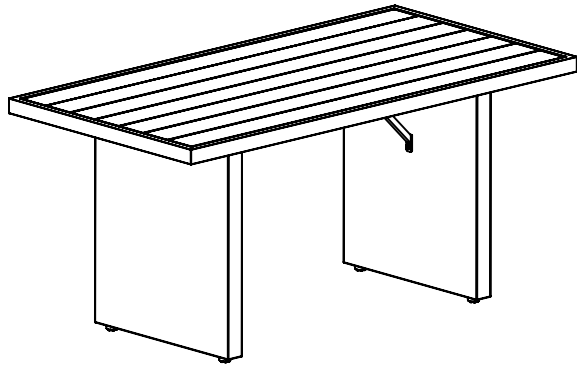


① x12
M6x15




② x12

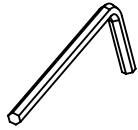


③ x01

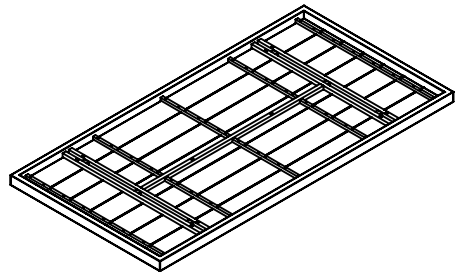

Ⓐ x1

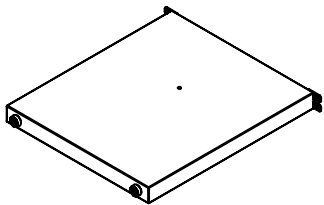


Ⓑ x2

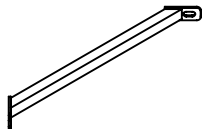


Ⓒ x2

ASSEMBLY INSTRUCTION


Step 1

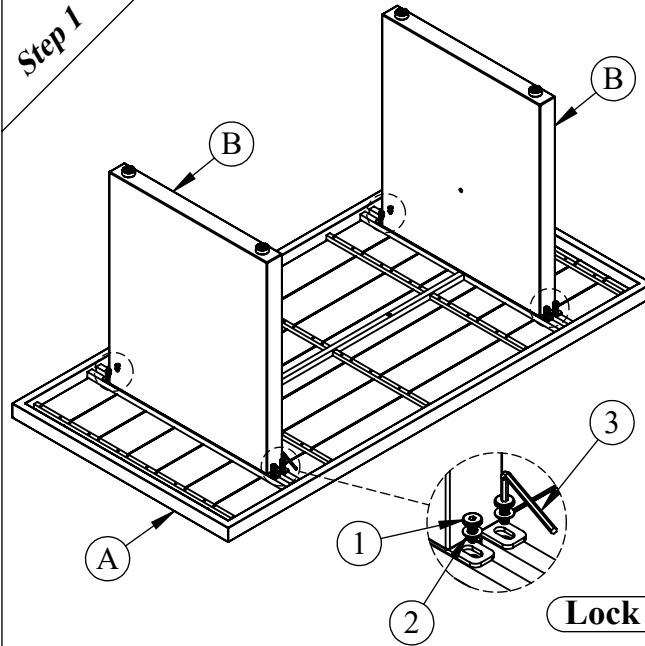


Step 2

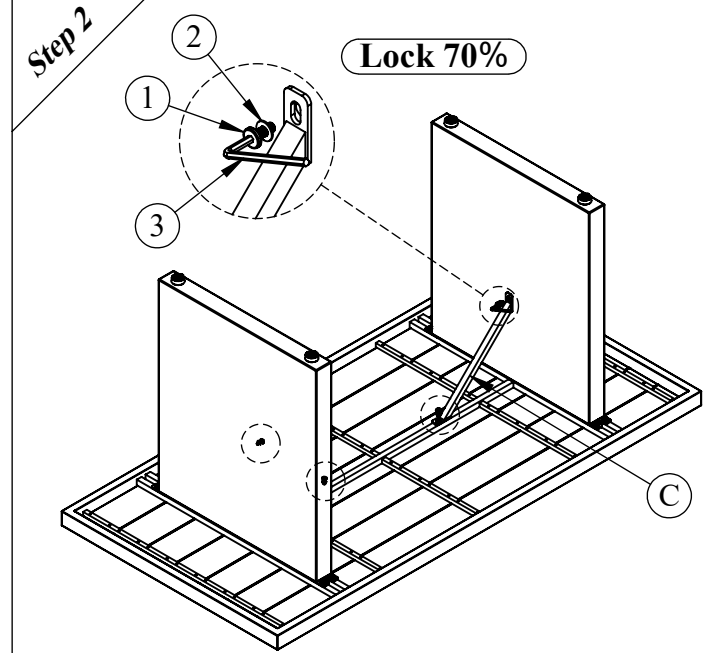





Step 3

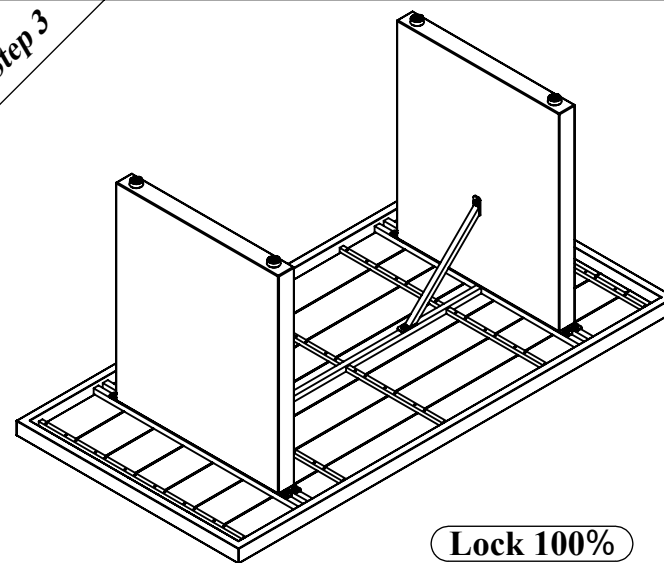


Finish

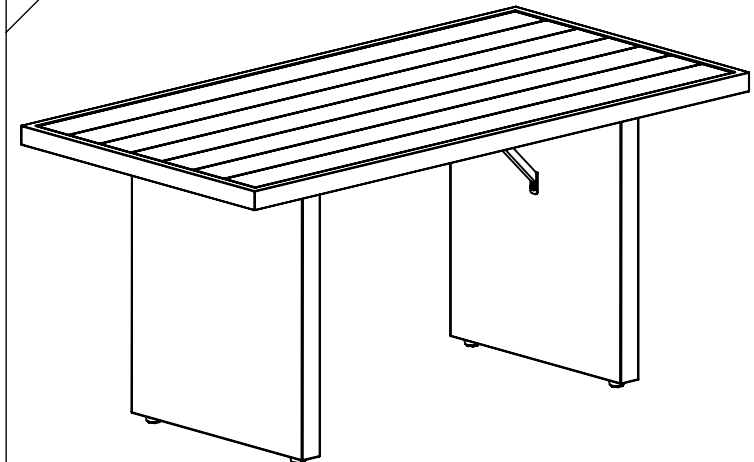


ASSEMBLY INSTRUCTION

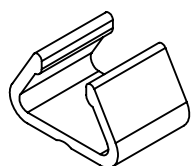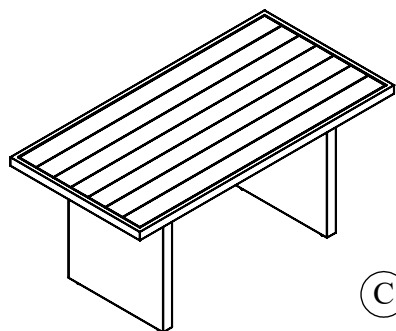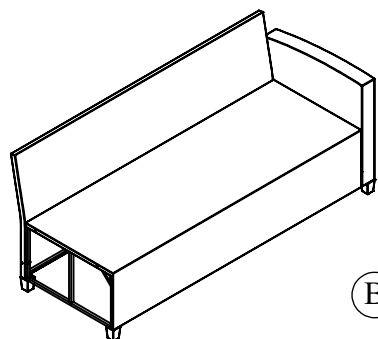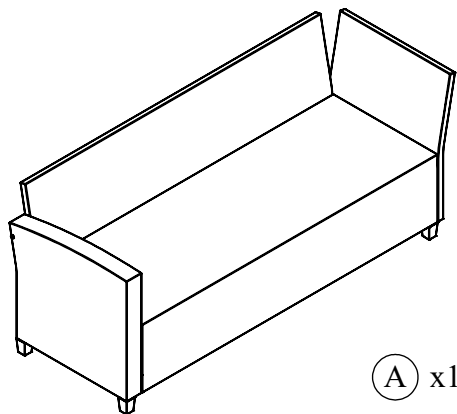

Step 1

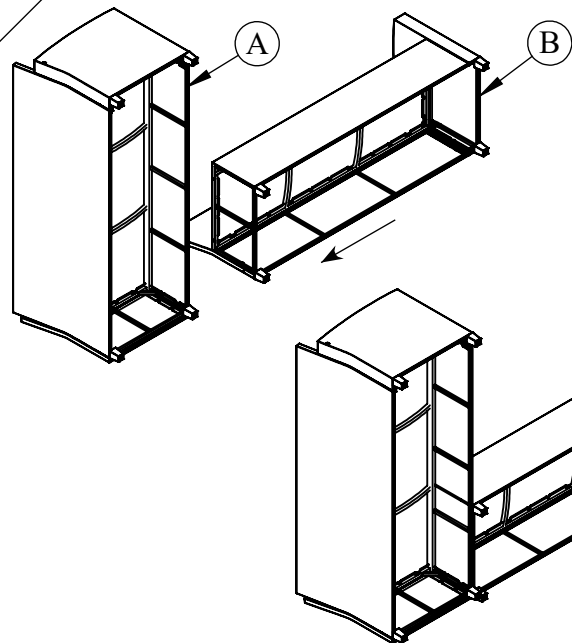

Step 2

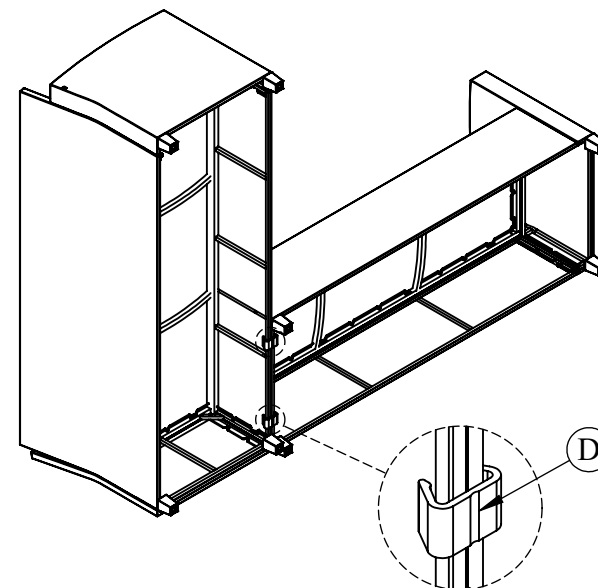

Finish

